

Instrucciones cambio cilindro

Instructions remplacement cylindre

Cylinder change instructions

1. Quitar el protector.
2. Desmontar el antiguo cilindro. (Es necesario tener la llave del cilindro).
3. Desatornillar la pieza de unión del cilindro.
4. Montar el nuevo cilindro.

1. Retirez le protecteur.
2. Retirez l'ancien cylindre. (Vous devez avoir la clé cylindrique).
3. Dévissez la pièce de raccordement du cylindre.
4. Montez le nouveau cylindre.

1. Remove the protector.
2. Remove the old cylinder. (You need to have the cylinder key).
3. Unscrew the connecting piece from the cylinder.
4. Fit the new cylinder.

