

Attaching the D-Smart locking door magnet

1. Place the magnet in the frame at the height of the crank (1110 mm from the ground) and as close to the outside of the door without removing the protective paper (see figure 1).
2. Calibration of the D-Smart system magnetometer (see manual).
3. Remove the protective paper from the adhesive part of the magnet and stick it in its final position (see figure 2).

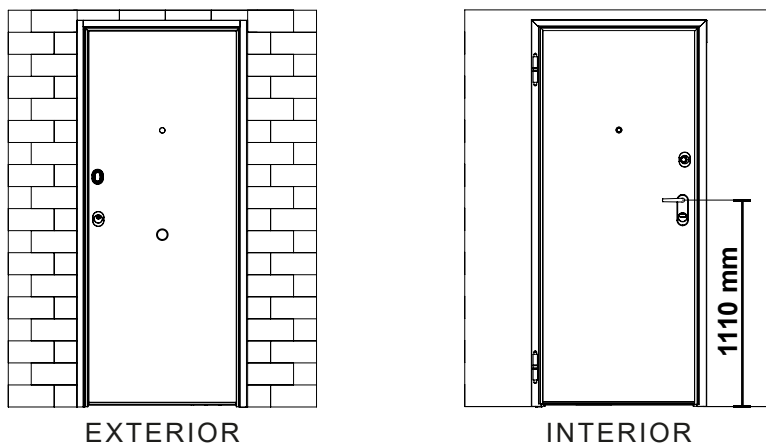


Figure 1

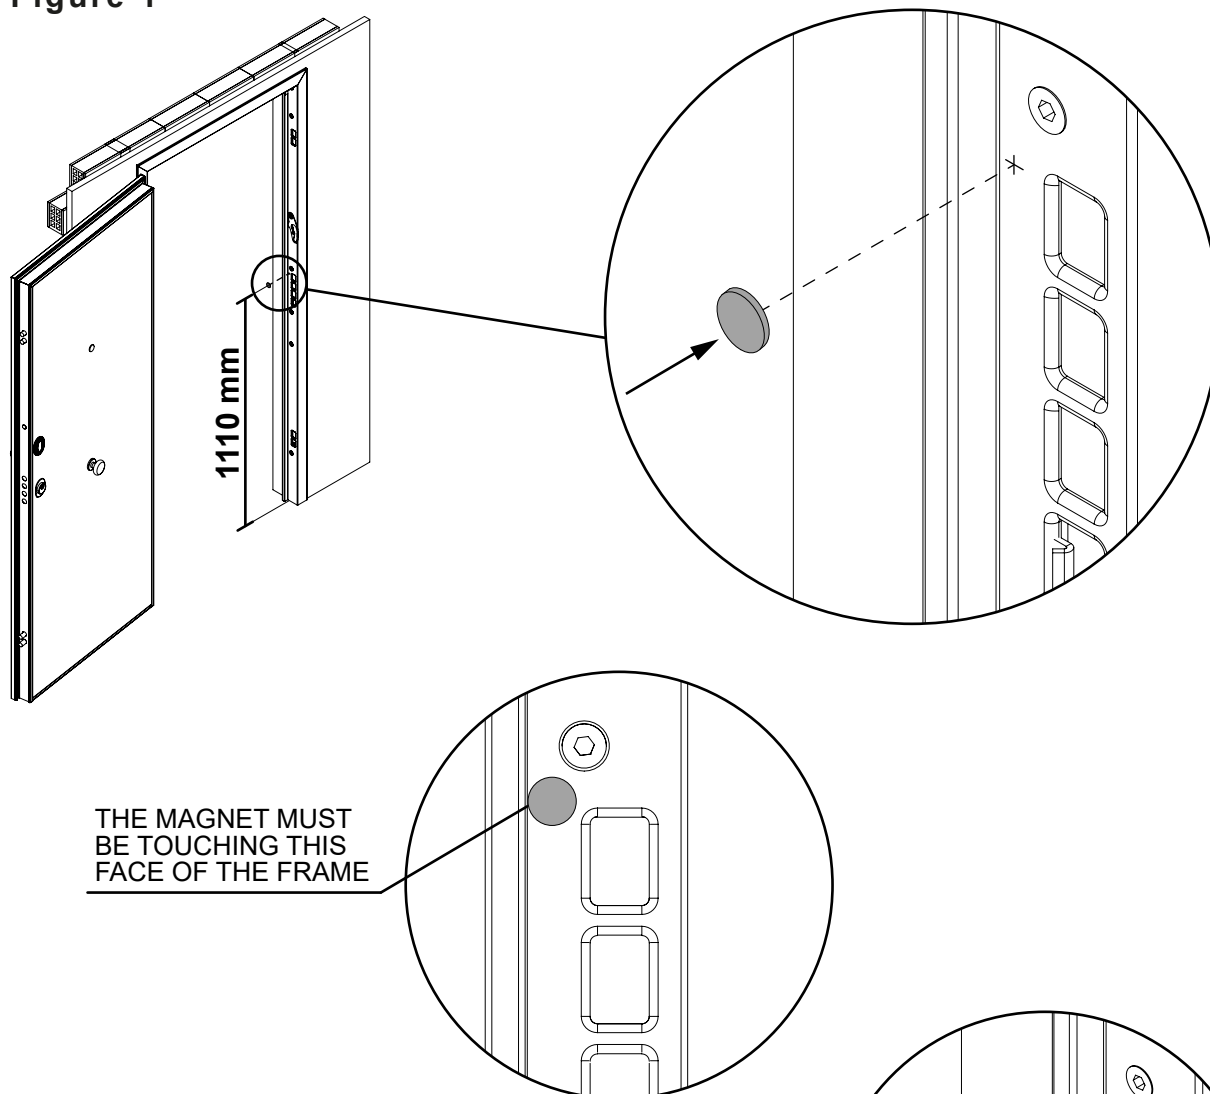


Figure 2

